



Printed Blinds Australia

MEASURING FOR ROLLER BLINDS


Always use a metal tape measure..

Always write down your measurements width x drop.

We require your measurements in millimetres.

Measure every window, as they may have a slight variation that will effect your window furnishings from fitting perfectly

TO FIT INSIDE WINDOW FRAME

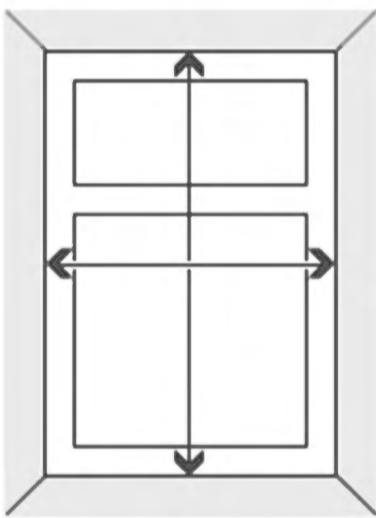


HOW TO MEASURE FOR RECESS MOUNT

(For fitting your blind inside the window frame)

- A. Measure the width from the inside of the window frame from left side to right side. Making sure to measure at the top of the window, the middle of the window and the bottom of the window. **write down the smallest of these measurements. This is your width.**
- B. Measure the drop from the top of the inside recess to the base of the inside sill.
- C. Decide if you want your side winder chain to go on either the left or right hand side.
- D. Make sure you have enough depth to mount the blind inside the frame. 40mm will be sufficient. Less will result in the blind protruding out of the recess. Minimum depth required is 30mm.

DO NOT MAKE ANY DEDUCTIONS AS OUR FACTORY WILL DO THIS TO ENSURE A PERFECT FIT.

TO FIT OUTSIDE THE WINDOW REVEAL

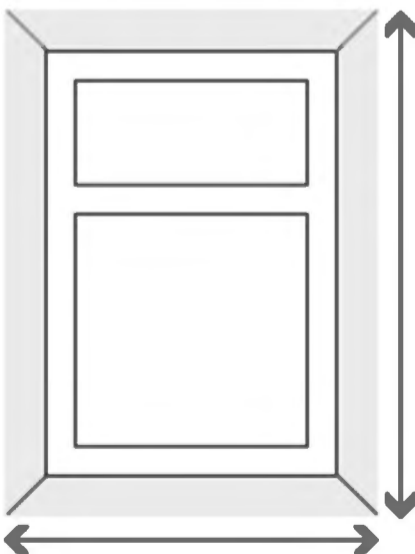

HOW TO MEASURE FOR OUTSIDE FIT

(For fitting your blind outside the window frame with architraves.)

- A. Measure the width from the outer edge of the architrave to the opposite outer edge.
- B. Measure the drop from the top of the architrave to where you want the blind to finish.
- C. Decide if you want your side winder chain to go on either the left or right hand side.

IF YOU DO NOT HAVE ARCHITRAVES (TIMBER FRAME) AROUND WINDOW.

Measure the opening and add at least 100mm to allow the blind to go past the opening. (100mm will give 35mm of cloth each side)

Measure the opening and add at least 100mm to the drop (height) to allow the blind to be mounted above the opening.

Decide if you want your chain winder to go on either the left or right hand side.