

STEP-BY-STEP GUIDE: HOW TO MEASURE ROLLER BLINDS


ALWAYS:

- Use a metal tape or reliable laser measure
- Write down your measurements: width x height
- Take measurements in millimeters
- Check for any window obstructions (eg) door handles, winders, tiles or skirting boards
- Double-check your measurements

1. SELECT FIT TYPE


A. INSIDE

- When your blind is fitted within the window frame or opening
- This style allows for your window frame to be exposed and gives a built-in look
- A minimum of 30 mm is required to fix brackets.
- 60 mm of depth is required to ensure the blind fits flush inside.
- Due to the brackets and mechanism this style of fit leaves a light gap of approximately 15mm at the top and left and right sides. If this light gap is not ideal for you please select an **Outside Fit**.

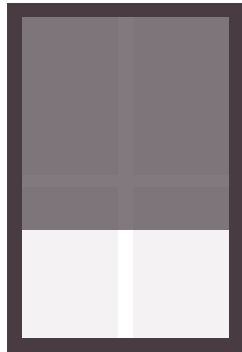

B. OUTSIDE

- When your blind is fitted on the wall or architrave (the timber frame surrounding the window)
- Best option when there is not enough depth for an inside fit or when looking for more light coverage than an Inside Fit.

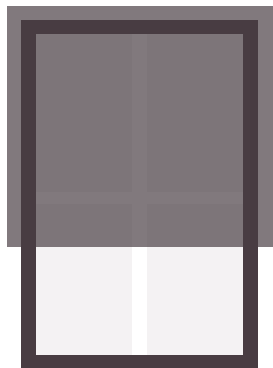

***DO NOT MAKE DEDUCTIONS TO THE MEASUREMENTS:
WE DO THIS IN PRODUCTION**


2. MEASURE

A. INSIDE

STEP 1

Measure the inside of the window frame at the very top where your brackets will be mounted.

This is your width.*

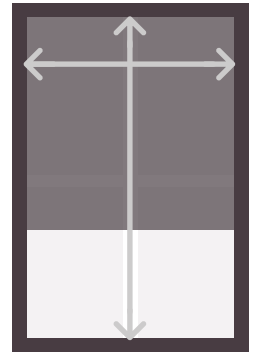

STEP 2

Measure the height from the top of the inside recess to the bottom of the inside window sill.

This is your height.*

B. OUTSIDE (WITH TIMBER ARCHITRAVE)

STEP 1


Measure the width from the outside edge of the architrave to the opposite edge of the frame.

This is your width.*

STEP 2

Measure the height from the top edge of the architrave to the bottom edge of your bottom architrave.

This is your height.*

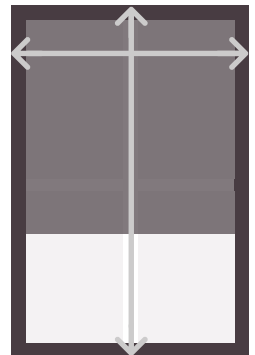

C. OUTSIDE FIT (WITH NO TIMBER ARCHITRAVE)

STEP 1

Measure the window opening from left to right at the top of the window recess. Add a minimum of 100mm to this measurement to allow the blind fabric to cover the opening (100mm will give you approximately 35mm of fabric past each of the opening) **WE DO NOT ADD THIS ON TO YOUR MEASUREMENT.**

This is your width.*

STEP 2

Measure the height of the window opening and add a minimum of 100mm to this measurement to allow the blind to be mounted above the window while still covering the whole window opening.

This is your height.*

